


This Quick Start Guide is provided so that you can properly set up your new TV.

(Part 1)


1 ACCESSORIES

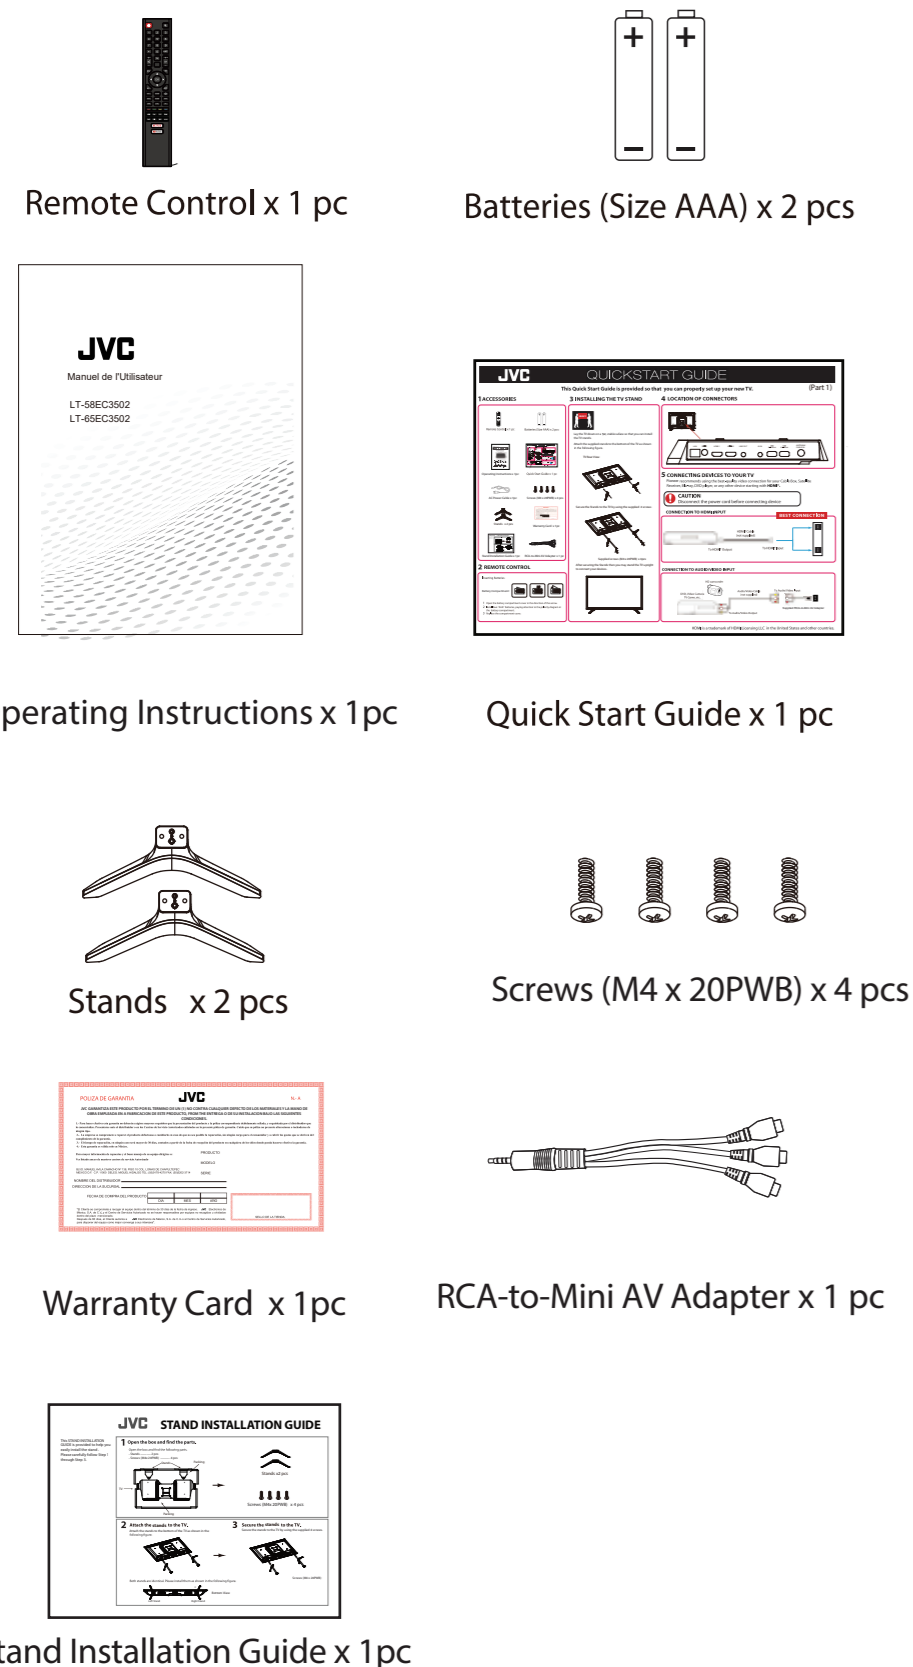

2 REMOTE CONTROL

Inserting Batteries

Battery Compartment:

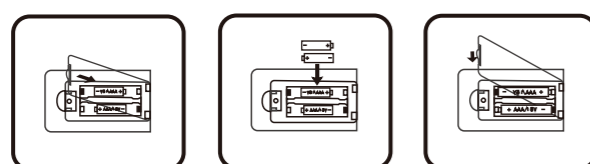

- 1 Open the battery compartment cover in the direction of the arrow.
- 2 Install two "AAA" batteries, paying attention to the polarity diagram in the battery compartment.
- 3 Replace the compartment cover.


3 INSTALLING THE TV STAND




Lay the TV down on a flat, stable surface so that you can install the TV stands.

Attach the supplied stands to the bottom of the TV as shown in the following figure.

TV Rear View

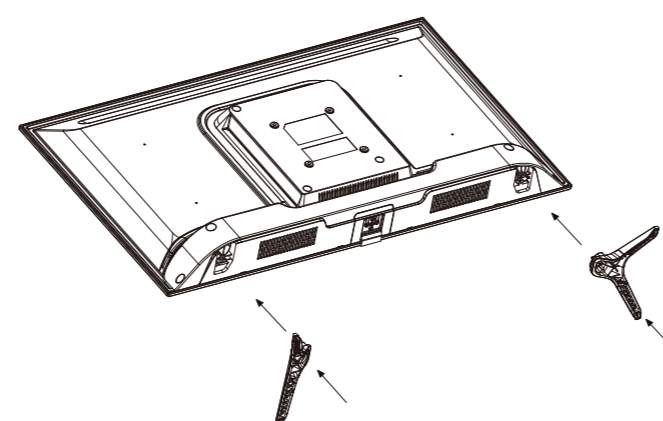


Secure the Stands to the TV by using the supplied 4 screws

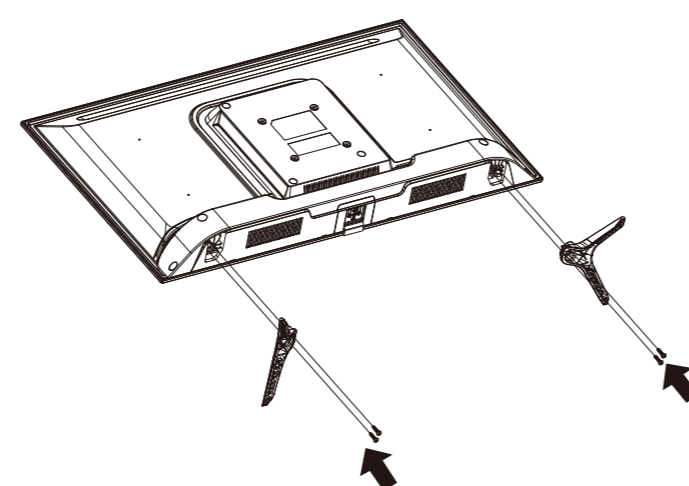


Supplied screws (M4 x 20PWB) x 4pcs

After securing the Stands then you may stand the TV upright to connect your devices.

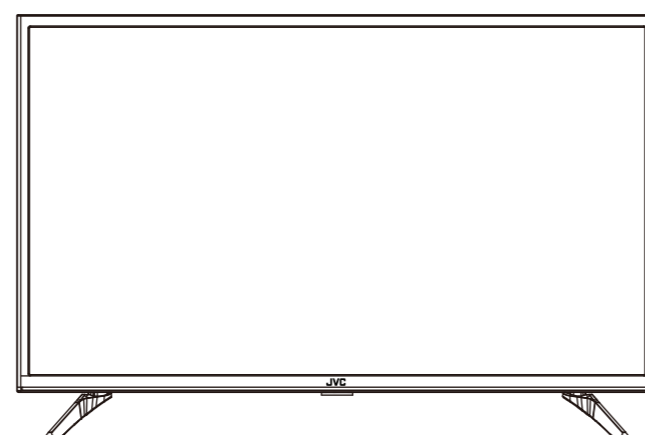

4 LOCATION OF CONNECTORS

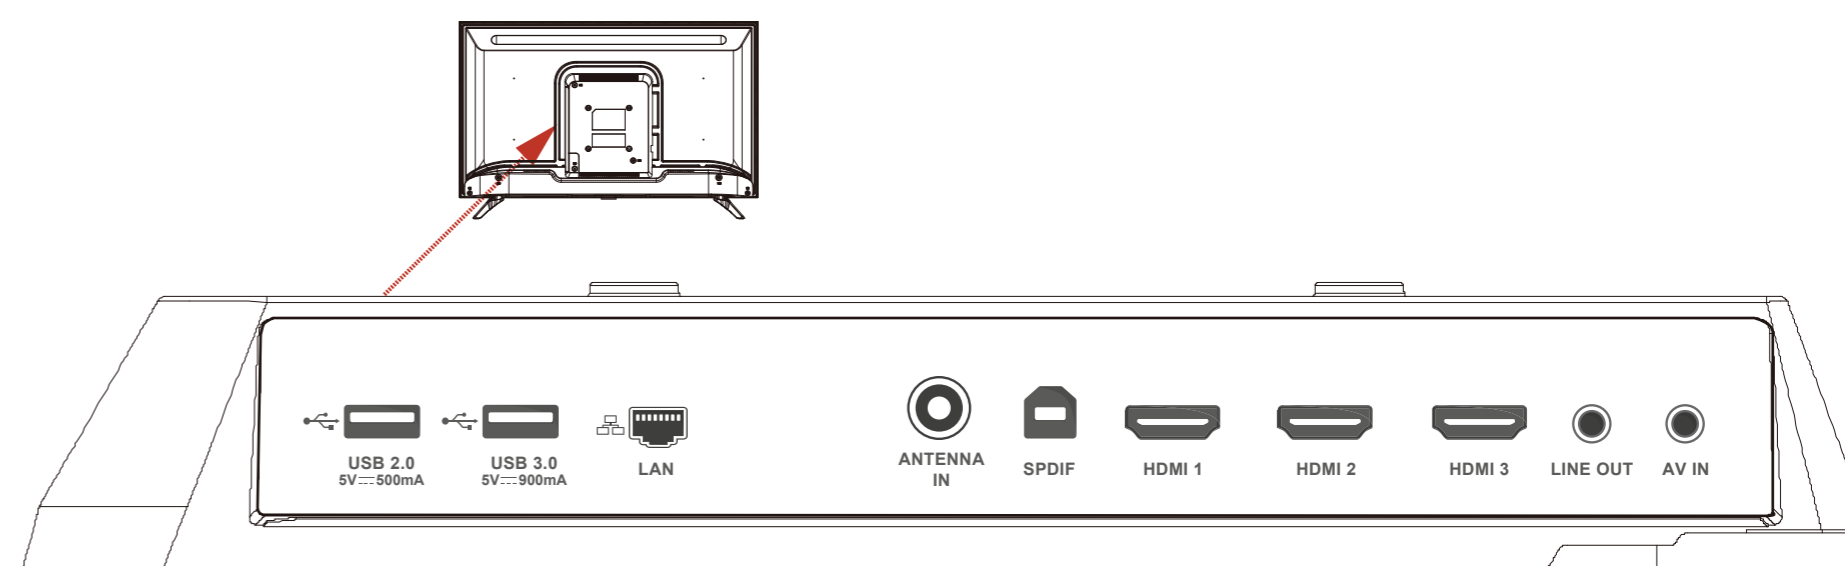

5 CONNECTING DEVICES TO YOUR TV

JVC recommends using the best-quality video connection for your Cable Box, Satellite Receiver, Blu-ray, DVD player, or any other device starting with **HDMI®**.




CAUTION


Disconnect the power cord before connecting device

CONNECTION TO HDMI INPUT

BEST CONNECTION

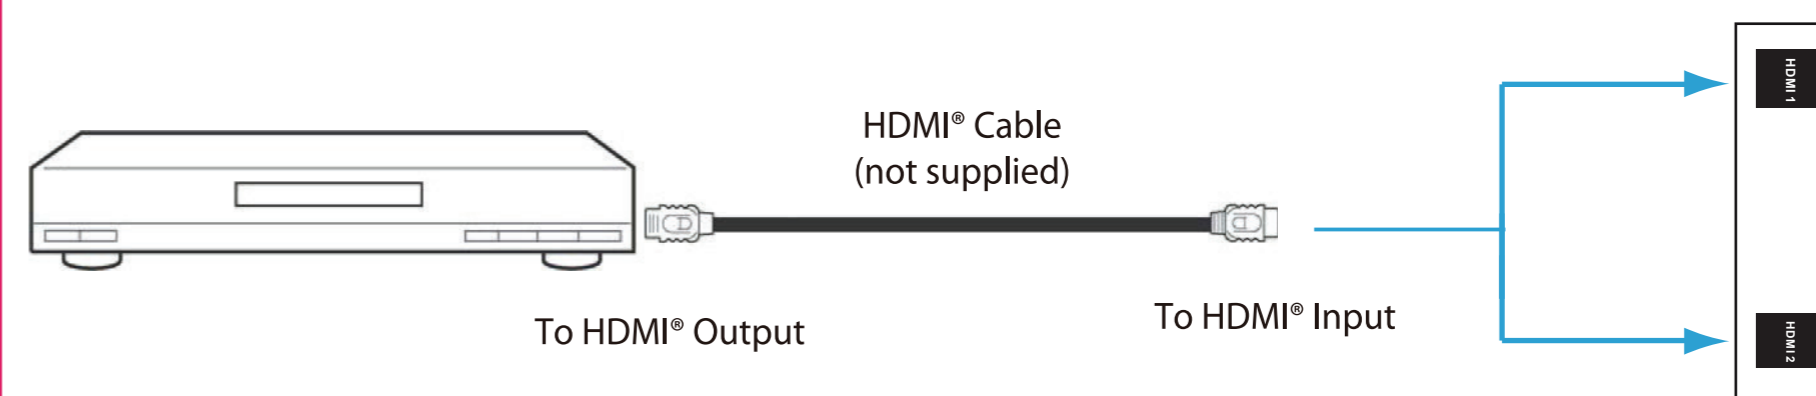


CONNECTION TO AUDIO/VIDEO INPUT

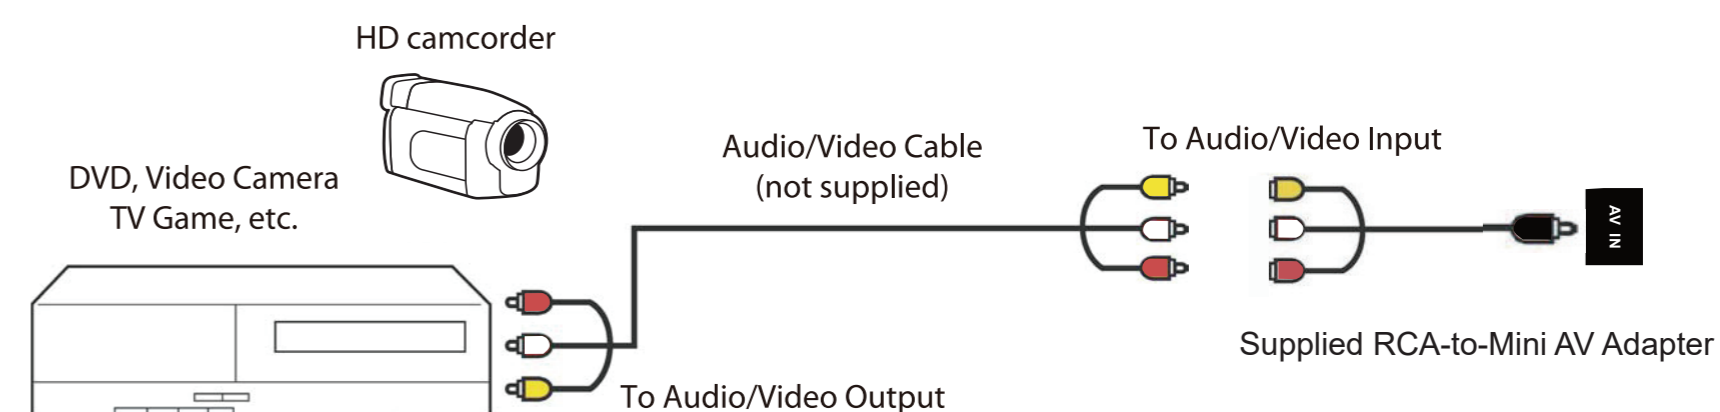



5 CONNECTING DEVICES TO YOUR TV (Cont.)

ANTENNA/CABLE CONNECTIONS

If you are connecting to a cable or Satellite Receiver then the setup process ends here. You can simply turn on the TV, press the "SOURCE" button on the remote control and scroll to your appropriate input that matches your connection. I.E: If you connected your cable to **HDMI 1**, then you switch the source to **HDMI 1** in the Source Menu.

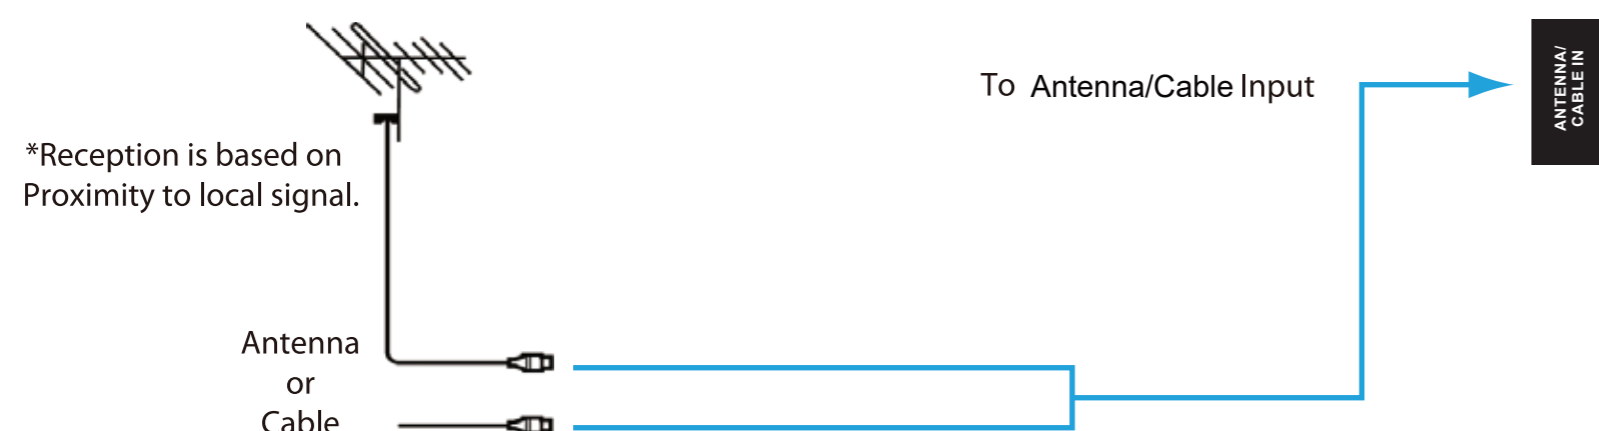

6 POWER CORD CONNECTION & POWER ON

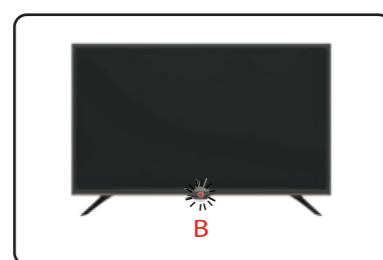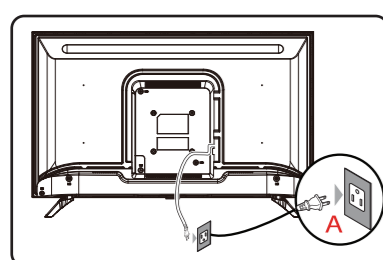

The AC Power Cord is attached on the rear of the TV as shown in the above figure.
A) Connect the power cord plug to the power outlet on your wall.
B) The power indicator on the front of the TV will light up red.



You can use the power button on the remote control or on the bottom of the TV to switch the TV into the "ON" or "STANDBY" mode. The power indicator will be off in the "ON" mode.

7 INITIAL SETUP

Initial setup involves selecting all the settings required to be able to search for and store all the channels you can receive. Make sure that the television is switched on and follow all the steps in turn specified hereafter. The first time you switch the set on, the initial setup menu appears, which guides you through the initial setup process. Press ok to enter.

Step 1: Environment setup

1. Press ▲/▼ to select your language, then press **OK** to enter the next step.
2. Press ▲/▼ to select your location, then press **OK** to enter the next step.

Step 2: Network setup

1. Press ▲/▼ to select your network connection type (Wired or wireless), then press **OK** to enter the next step.
2. Follow the guides on the screen and press the corresponding buttons on the remote control to proceed.

Step 3: Software Update

1. If the TV set has connected to the network successfully, it will search for upgrade files automatically.
2. Follow the guides on the screen and press the corresponding buttons on the remote control to proceed.

7 INITIAL SETUP (Cont.)

Step 4: Channel installation

1. Press ▲/▼ to select Continue to install channels.
2. Follow the guides on the screen and press the corresponding buttons on the remote control to proceed.

Step 5: Clock setup

If the TV set is not connected to the network, you can use the numeric buttons to enter the date and time, then select the **OK** button and press **OK** to confirm. When the initial setup is completed, the Congratulations message appears, press confirm.

NOTE:

To prevent the channel setup process from being interrupted, wait for the message indicating that the setup is complete.

Initial Setup Complete


After initial setup is completed, press OK to exit. The channels are arranged in a preset order. If you wish to skip channels or organize channels, press MENU to display the main menu, select Channel Channel Edit and press OK to enter.

8 INTERNET CONNECTION

Your TV is internet-ready, and can be connected to your home network in two ways, by the wired connection or by the wireless connection.

Connecting to a wired network


1. Ensure you have;
 - An Ethernet cable long enough to reach to your TV.
 - A router or modem with an available Ethernet port.
 - A high-speed internet connection
2. Connect your Ethernet cable to the router or the modem and to the Ethernet port on the back of your TV.
3. Use the Network menu to configure the TV.

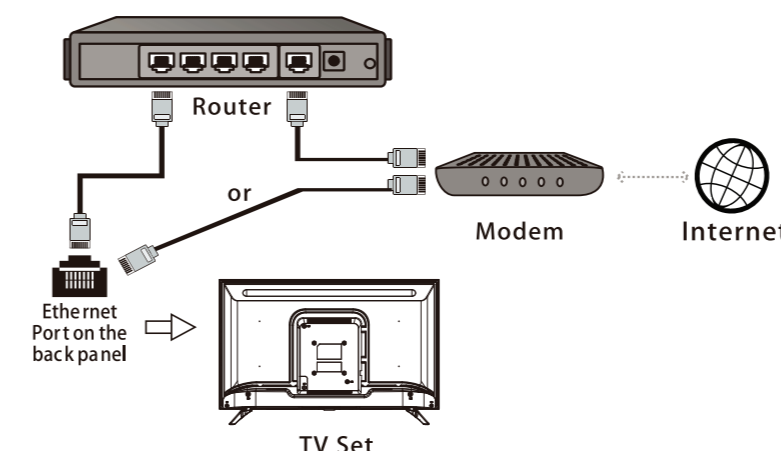

Connecting to a wireless network

1. Ensure you have;
 - A router broadcasting a high-speed wireless signal.
 - A high speed internet connection.
2. Use the Network menu to configure the TV.

Network Menu: Refer to Page 12 of the supplied user manual.

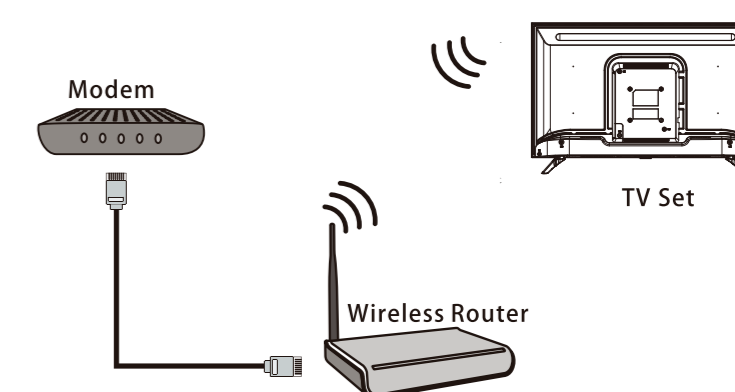

Your TV is Smart capable, and, by connecting it to internet, you can access to the APPs, such as Apps Store, Netflix, YouTube, Browser, Viewster, Deezer, Dailymotion, Radioline.

This product is manufactured, distributed, serviced and warranted exclusively by E & S International Enterprises, Inc. "JVC" is the trademark of JVC KENWOOD Corporation, used by such company under license.

JVC SERVICE & TECHNICAL SUPPORT

www.jvcproducts.com