

<div>TCL</div> <div>TCL多媒体 SCBC(战略客户业务中心) 设计中心-平面设计室</div> <div>平面设计制作规范表</div>		基本内容				资料更新履历			
		品牌	JVC	销往地	CANADA/加拿大				
物料编码	70-5812JV-QSGZ1	机型/机芯	58D1200 1RT851A1ATA 芯片名称:RTD2851ESA	BOM/批次	E3-58D120D5-CD0				
物料名称	英文 QSG	销售型号	LT-58EC3508		E3-58D120D5-CD0A				

制作要求	工艺或使用方法
------	---------

尺寸	260 X 200 mm
材质	230克哑粉纸
颜色要求	四色正反双面印刷
是否折叠或装订要求	
是否送样	否

备注:

资料由客户提供，如有误，
请以业务客户审签资料为准。


图纸请见下页

制作人	袁惠芳	制作日期	2020-9
平面审核		硬件会签	
结构会签		业务/DQA 会 签	
软件会签			

This Quick Start Guide is provided so that you can properly set up your new TV.

(Part 1)

1 ACCESSORIES

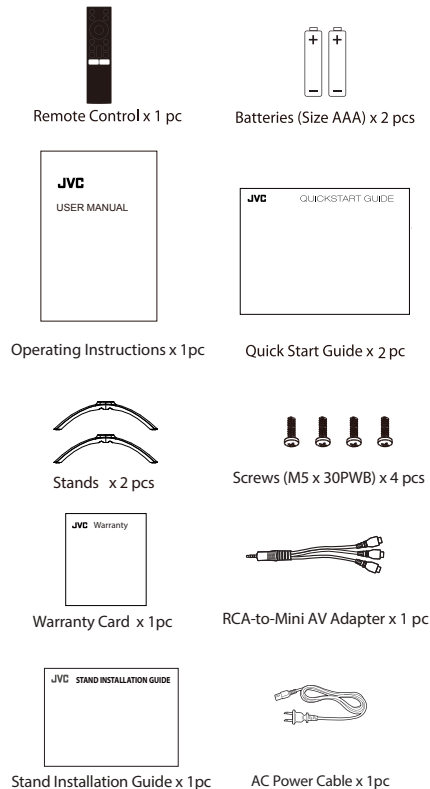

2 REMOTE CONTROL

Inserting Batteries

Battery Compartment:



- 1 Open the battery compartment cover in the direction of the arrow.
- 2 Install two "AAA" batteries, paying attention to the polarity diagram in the battery compartment.
- 3 Replace the compartment cover.


3 INSTALLING THE TV STAND




Lay the TV down on a flat, stable surface so that you can install the TV stands.

Attach the supplied stands to the bottom of the TV as shown in the following figure.

TV Rear View

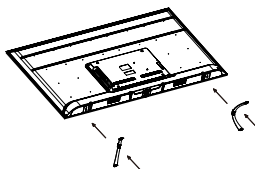


Secure the Stands to the TV by using the supplied 4 screws

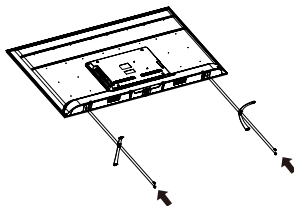


Supplied screws (M5 x 30PWB) x 4pcs

After securing the Stands then you may stand the TV upright to connect your devices.

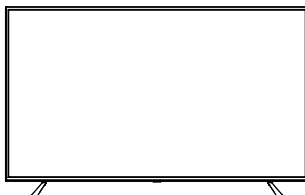

4 LOCATION OF CONNECTORS

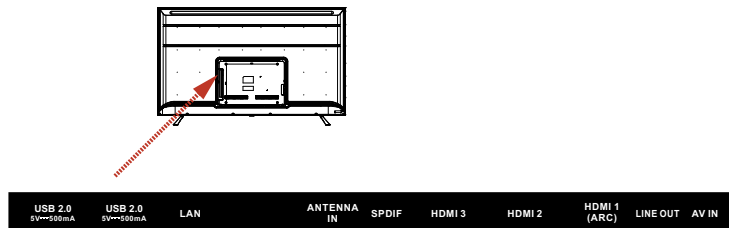

5 CONNECTING DEVICES TO YOUR TV

JVC recommends using the best-quality video connection for your Cable Box, Satellite Receiver, Blu-ray, DVD player, or any other device starting with **HDMI®**.




CAUTION


Disconnect the power cord before connecting device

CONNECTION TO HDMI INPUT

BEST CONNECTION

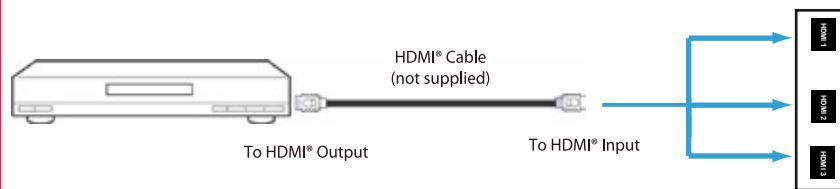

CONNECTION TO AUDIO/VIDEO INPUT

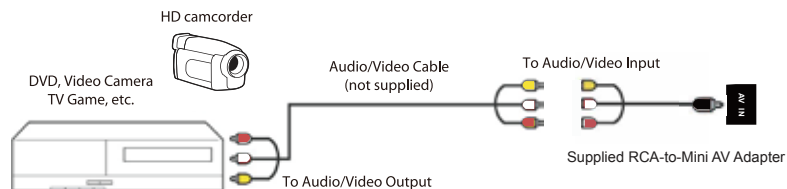


The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Note: The pictures are only for reference.




5 CONNECTING DEVICES TO YOUR TV (Cont.)

ANTENNA/CABLE CONNECTIONS

If you are connecting to a cable then the setup process ends here. You can simply turn on the TV, press the "SOURCE" button on the remote control and scroll to your appropriate input that matches your connection. I.E: If you connected your cable to HDMI 1, then you switch the source to HDMI 1 in the Source Menu.

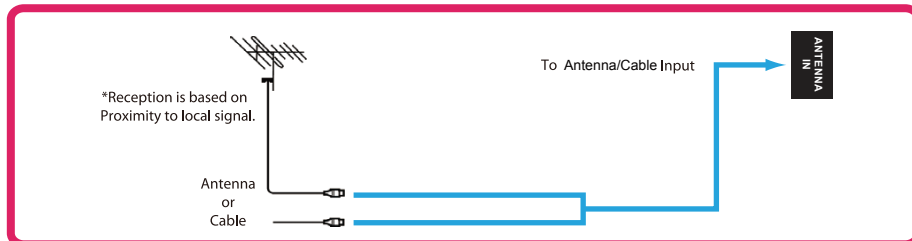

6 POWER CORD CONNECTION & POWER ON

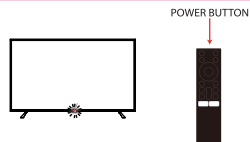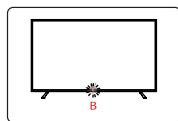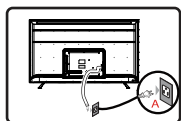

The AC Power Cord is attached on the rear of the TV as shown in the above figure.

A) Connect the power cord plug to the power outlet on your wall.

B) The power indicator on the front of the TV will light up red.

You can use the power button on the remote control or on the bottom of the TV to switch the TV into the "ON" or "STANDBY" mode. The power indicator will be off in the "ON" mode.

7 INITIAL SETUP

Initial setup involves selecting all the settings required to be able to search for and store all the channels you can receive. Make sure that the television is switched on and follow all the steps in turn specified hereafter. The first time you switch the set on, the initial setup menu appears, which guides you through the initial setup process. Press ok to enter.

Step 1: Environment

Press ▲/▼ to select your environment. Then press **OK** to enter next step.

Step 2: Where are you?

Press ▲/▼ to select your Country/Region. Press **OK** to confirm and move to next step.

Step 3: Terms & Conditions

Use ▲/▼ to read Terms & Conditions, then press **OK** to confirm and move to next step.

Step 4: Channel installation

Press ▲/▼ to select Continue to install channels.

Follow the guides on the screen and press the corresponding buttons on the remote control to proceed

Step 5: Please check settings

When all setup is done, press **OK** to finish the initial setup.


You can also go back to former step and make any changes.

8 INTERNET CONNECTION

Your TV is internet-ready, and can be connected to your home network in two ways, by the wired connection or by the wireless connection.

Connecting to a wired network


1. Ensure you have;
 - An Ethernet cable long enough to reach to your TV.
 - A router or modem with an available Ethernet port.
 - A high-speed internet connection
2. Connect your Ethernet cable to the router or the modem and to the Ethernet port on the back of your TV.
3. Use the Network menu to configure the TV.

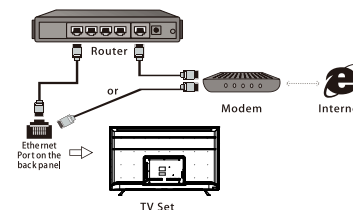

Connecting to a wireless network

1. Ensure you have;
 - A router broadcasting a high-speed wireless signal.
 - A high speed internet connection.
2. Use the Network menu to configure the TV.

Network Menu: Refer to the supplied user manual.

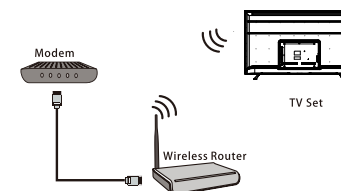

Your TV is Smart capable, and, by connecting it to internet, you can access to the APPs.

This product is manufactured, distributed, serviced and warranted exclusively by E & S International Enterprises, Inc. "JVC" is the trademark of JVC KENWOOD Corporation, used by such company under license.

JVC SERVICE & TECHNICAL SUPPORT

www.jvcproducts.com